Vaporella®

505 PRO

Vaporella®

507 PRO

POLTI®

INNOVATIVE BY NATURE.

Fig. 1

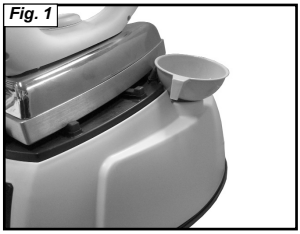

Fig. 2

Fig. 3

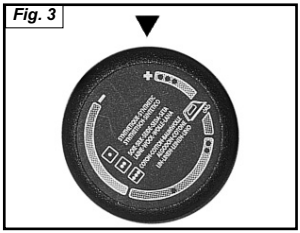

Fig. 4

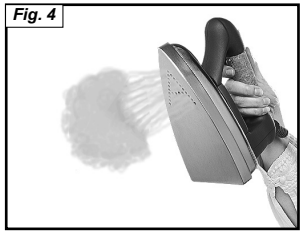

Fig. 5

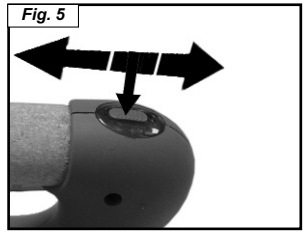

PRECAUTIONS

KEEP THESE INSTRUCTIONS

- Read these instructions carefully before using the appliance.
- Any use which does not comply with these instructions will invalidate the warranty.
- If this instruction manual is lost, it is possible to review it and/or download it from the web site www.polti.com
- Unpack the product and make sure it is intact as well as all the accessories listed in the key. If in doubt, do not use the product and contact an Authorized Service Centre.
- This appliance has been designed only for domestic use.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. Keep the iron and its cord out of reach of children less than 8 years of age when it is energized or cooling down.
- Children should be supervised to ensure that they do not play with the appliance.
- In case the appliance is accidentally dropped, it is necessary to have it checked by an authorized Service Centre as the internal safety features may have been affected.
- High-pressure jets can be dangerous if used improperly. Do not direct the steam jet at people, live electrical equipment or the appliance itself.
- Keep all the parts of the packaging out of the reach of children, they are not a toy. Keep the plastic bag out of the reach of children: danger of suffocation.

	ATTENTION: High temperature. Risk of scalding! If indicated do not touch the parts on the product
	ATTENTION: Risk of scalding!

SAFETY WARNINGS:

Risk of electric shock and/or short circuit:

- The wiring system to which the appliance is connected must always comply with the laws in force.
- Before connecting the appliance, make sure that the mains voltage is the same as the voltage indicated on the data label of the appliance and that the power outlet is connected to earth.
- Always turn off the appliance at the on/off switch before unplugging it.
- If the appliance is left unused, always disconnect it from the mains. Never leave the appliance unattended with the cable plugged into the mains.
- Always make sure the appliance is unplugged before performing maintenance work of any kind.
- Do not pull the power cable out of the socket, but grasp the plug itself to avoid damage to the socket.
- Do not allow the power cable to be twisted, crushed, stretched, or come into contact with sharp or hot surfaces.
- Do not use the appliance if the power cable or other important parts of the appliance are damaged. Instead, contact an authorised service centre.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not use electric extension leads that are not authorized by the manufacturer, as they may cause damage or fire.
- Never touch the appliance with wet hands or feet with the cable plugged into the mains.
- Do not use the appliance when barefoot.
- Do not use the appliance near washbasins, bathtubs, showers or containers full of water.
- Never immerse the appliance, the cable or the plugs in water or another liquid.
- Do not direct the steam jet at live electrical and/or electronic equipment or at the appliance itself.

SAFETY WARNINGS:

Risk of injury and/or burns during use of the appliance

- Use of the appliance in places where there is a danger of explosions is prohibited.
- Do not use the product with toxic substances.
- In case of breakdown or malfunction switch off the appliance and never attempt to disassemble it, but refer to an authorized Polti Service Centre.
- This appliance is equipped with safety devices which are to be replaced only by a suitably qualified technician.
- Before cleaning or storing the appliance, always first ensure that the appliance has cooled down completely.
- Do not direct the steam jet at people, animals or debris.
- Never place your hands inside the jet of steam.
- While refilling with water, switch off and disconnect the appliance from the mains.
- Do not use if the appliance has been dropped, has visible signs of damage or leaks.
- If ironing whilst sitting down, take care to ensure that the jet of steam is not angled towards your legs. Steam can scald.
- Before connecting the appliance to the current, ensure that the continuous steam jet button is not pressed.
- Never leave the iron unattended when it is plugged in.
- efore refilling the appliance when it is hot, allow it to cool for a few minutes.
- Keep your face away if you fill the boiler when it is still hot, the water can evaporate on contact with the hot boiler, causing a jet of steam.
  When filling a hot boiler, we recommend adding small amounts of water to avoid the water evaporating instantly with the risk of burning.
- Do not empty the appliance when the water inside the boiler is still hot.
- Do not try to unscrew the cap when the appliance is in operation.
- Regularly check the status of the safety cap and seal, replace with original parts as necessary.
- Make sure the safety cap is screwed on properly, otherwise it may cause steam leaks.
- Do not force open the cap when there is a minimum pressure of steam in the boiler.
- Never leave the filling bottle or the funnel resting on the mouth of the boiler, with the product connected to the power supply, since this could cause burns.

SAFETY WARNINGS:

using the appliance:

- This appliance has been designed to work with normal tap water.
  Absolutely do not use distilled water, dryer condensate water, perfumed water, rain water, battery water, water from air conditioning systems and the like. Do not use chemical substances or detergents.
- Do not use limescale products other than Kalstop FP2003.
- Never leave the appliance exposed to the weather.
- Do not place the appliance near a live element, an electric stove or any other source of heat.
- Do not expose the appliance to temperatures under 0°C or over 40°C
- Press the buttons only with a finger, without excessive force and avoid using a pointed object such as a pen.
- Do not wind the power cable around the appliance, especially when the appliance is still hot.
- To avoid prejudicing the safety of the appliance when repairing or replacing accessories, use only original spare parts.
- Let the appliance cool down before cleaning it.
- Before storing the appliance make sure that it has completely cooled down.
- It is necessary to keep the unit in horizontal position during operation.
- Always rest the appliance on a stable surface.
- Iron only on supports that are heat resistant and which allow the steam to permeate.
- If the iron rest mat needs to be replaced, only use original spare parts.
- The iron must be used and rested on a stable surface.
- When placing the iron on its stand, make sure that the surface on which the stand is placed, is stable.
- Do not place the hot appliance on heat-sensitive surfaces.

Read these instructions carefully before using the appliance.

Dear Custumer
Thank you for your confidence in buying this Polti product for perfect ironing in less time.
Your Vaporella has been designed to ensure maximum ironing comfort; its quality materials make it a reliable work-mate.
The powerful jet of Vaporella steam acts on the fabrics eliminating every crease.
Therefore it is not necessary to press on or iron repeatedly. Just let the iron slide over the garment to obtain perfect ironing, saving time and effort.
With Vaporella it is possible to iron vertically to revive fabrics and take out bad smells from jackets, clothes and overcoats.

Before using Vaporella, we recommend reading these instructions carefully.

KEY

1) Patented safety cap
2) Temperature adjustment knob
3) Steam request button
4) “Iron heating” indicator light
5) Continuous steam jet button
6) Flex
7) Power cable
8) ON/OFF switch
9) “Steam ready” indicator light
10) Funnel

CE *This unit conforms with EC-directives 2004/108/CE (EMC) and 2006/95/CE (low voltage).*

Polti S.p.A. reserves the right to change equipment or accessory specification without prior notice.

CORRECT USE OF THE PRODUCT

This appliance is intended for home use as a steam generator as described and in accordance with the instructions provided in this manual.
Please read these instructions carefully and keep them, as you may find them useful in future.

Polti Spa declines liability for any damage or accident derived from any use of VAPORELLA which does not comply with the instructions contained in this booklet.

ATTENTION

Directive 2002/96/EC (Waste Electrical and Electronic Equipment - WEEE): information for users
This product complies with EU Directive 2002/96/EC.

The crossed-out wastebasket symbol on the appliance means that at the end of its useful lifespan, the product must be disposed of separately from ordinary household wastes.
The user is responsible for delivering the appliance to an appropriate collection facility at the end of its useful lifespan.
Appropriate separate collection to permit recycling, treatment and environmentally compatible disposal helps prevent negative impact on the environment and human health and promotes recycling of the materials making up the product. For more information on available collection facilities, contact your local waste collection service or the shop where you bought this appliance.

IMPORTANT

Before leaving our factory all our products are rigorously tested. This is the reason why your VAPORELLA may contain some residual water in the boiler.

PREPARATION FOR USE

- Unscrew the safety cap (**1**) and fill the boiler with 0.9 l of water, making sure it does not overflow, using the special funnel (**10**) (Fig. 1).

WARNING: When filling a hot boiler, we recommend adding small amounts of water to avoid the water evaporating instantly with the risk of burning.

This appliance has been designed to work with normal tap water.
However, since water contains limestone by nature, which may cause scaling in the long run, we recommend using a 50/50 mixture of tap water and demineralised water or treated with softening systems. To use tap water and avoid scale formation, we recommend the addition of the special natural scale removal agent Kalstop FP2003.
Absolutely do not use distilled water, dryer condensate water, perfumed water, rain water, battery water, water from air conditioning systems and the like. Do not use chemical substances or detergents.

- Carefully screw the cap back in fully. Ensure that the safety cap (**1**) is correctly fastened. If not, steam could escape from the opening.
  In this case turn off the appliance, unplug it from the mains and wait for it to cool before screwing the cap back on.
- Plug the power lead (**7**) into a suitable socket with an earth connection.
- Press the ON/OFF switch (**8**) (Fig. 2).

NOTE: when filling, make sure that the water does not overflow, to avoid wetting the surface on which your Vaporella is resting

WARNING: Never leave the filling bottle or the funnel resting on the mouth of the boiler, with the product connected to the power supply, since this could cause burns.

INSTRUCTIONS FOR USE

Before ironing an item of clothing, always check the symbols on its label, for the instructions provided by the manufacturer.
Check, based on the following table, the most appropriate type of ironing:

	Steam ironing allowed For dry ironing, set temperature adjustment knob (2) on •••
	Steam ironing allowed For dry ironing, set temperature adjustment knob (2) on ••
	Check the fabric's resistance to steam ironing or dry iron with temperature adjustment knob (2) set on •
	- do not iron - steam ironing or treatment not allowed

STEAM IRONING

- Adjust the temperature of the iron with the temperature adjustment (**2**) to match the temperature required by the fabric (fig. 3).
- Wait for the “Steam Ready” indicator light (**9**) and “Iron Heating” indicator light (**4**) to turn off. Press the steam button (**3**) on the iron to make steam come out of the holes on the plate (fig. 4). Releasing the button, the flow stops.
- To have a continuous jet of steam move the button forward (**5**). The steam will continue to come out even when the button is released. To interrupt the supply, move the button (**5**) backward (Fig 5).

NOTE:

- When first using the steam, there may be some drops of water leaking out of the plate, this is due to imperfect thermal stabilization. We therefore recommend that the first jet of steam be directed onto a cloth (clean rag).
- The indicator lights (**4**) and (**9**) turn on and off during use. This indicates that the electrical resistor has started to work to keep the pressure of the boiler steady. This is a normal occurrence, and it is therefore possible to continue ironing.

DRY IRONING:

- Adjust the temperature of the iron with the temperature adjustment (**2**) to match the temperature required by the fabric (fig. 3).
  When ironing dry, pay attention not to press the steam button (**2**), since water could leak from the plate.

PATENTED SAFETY CAP / “WATER OUT”

This appliance is equipped with a patented safety cap which prevents the boiler being opened even accidentally, as long as there is even minimum pressure inside. Therefore, to be able to unscrew it, it is necessary to perform specific operations which are described below:
When the iron no longer dispenses steam, proceed as follows:

- Operate the steam request button (**3**) on the iron until the steam stops flowing.
- Turn the ON/OFF (**8**) switch off.
- Unplug the power cable (**7**) from the mains electricity.
- Unscrew the safety cap (**1**) anticlockwise.
- Wait a few minutes to let the boiler cool.
- Refill it by following the PREPARATION paragraph.

WARNING: Not complying with this procedure can expose you to the risk of burns.

KALSTOP

Water by its nature contains magnesium, mineral salts and other deposits which in hard water areas can contribute to limescale build up in the tank. In very hard water areas we recommend the use of our Kalstop FP2003, a special natural-base decalcifier which inhibits and breaks down limescale. This is a preventive against scale build-up and protects the metal walls of the boiler. Kalstop FP2003can be found in small appliance stores, Polti service centres and on the web site www.polti.com.

CARE OF YOUR VAPORELLA

- **Before carrying out any maintenance on the device, always unplug it from the power mains making sure that the product has cooled down before proceeding.**
- To clean the body of the appliance, simply use a moist cloth. Do not use solvents or detergents, which may harm the body material.

TROUBLESHOOTING

PROBLEM	SOLUTION
Water comes out of the iron instead of steam	- Check that the indicator lights (**4**) and (**9**) are off. - Check that the iron temperature adjustment knob (**2**) is not set at the minimum. - The boiler was overfilled with water.
Steam does not come out of the iron	- Check that there is water in the boiler.